


CAUTION :

Failure to do the following may DAMAGE the interposer and VOID the warranty.

- Secure adapters as shown in this guide
- Do NOT change adapters while powered
- Do NOT hot plug
- Turn on interposer power BEFORE host power



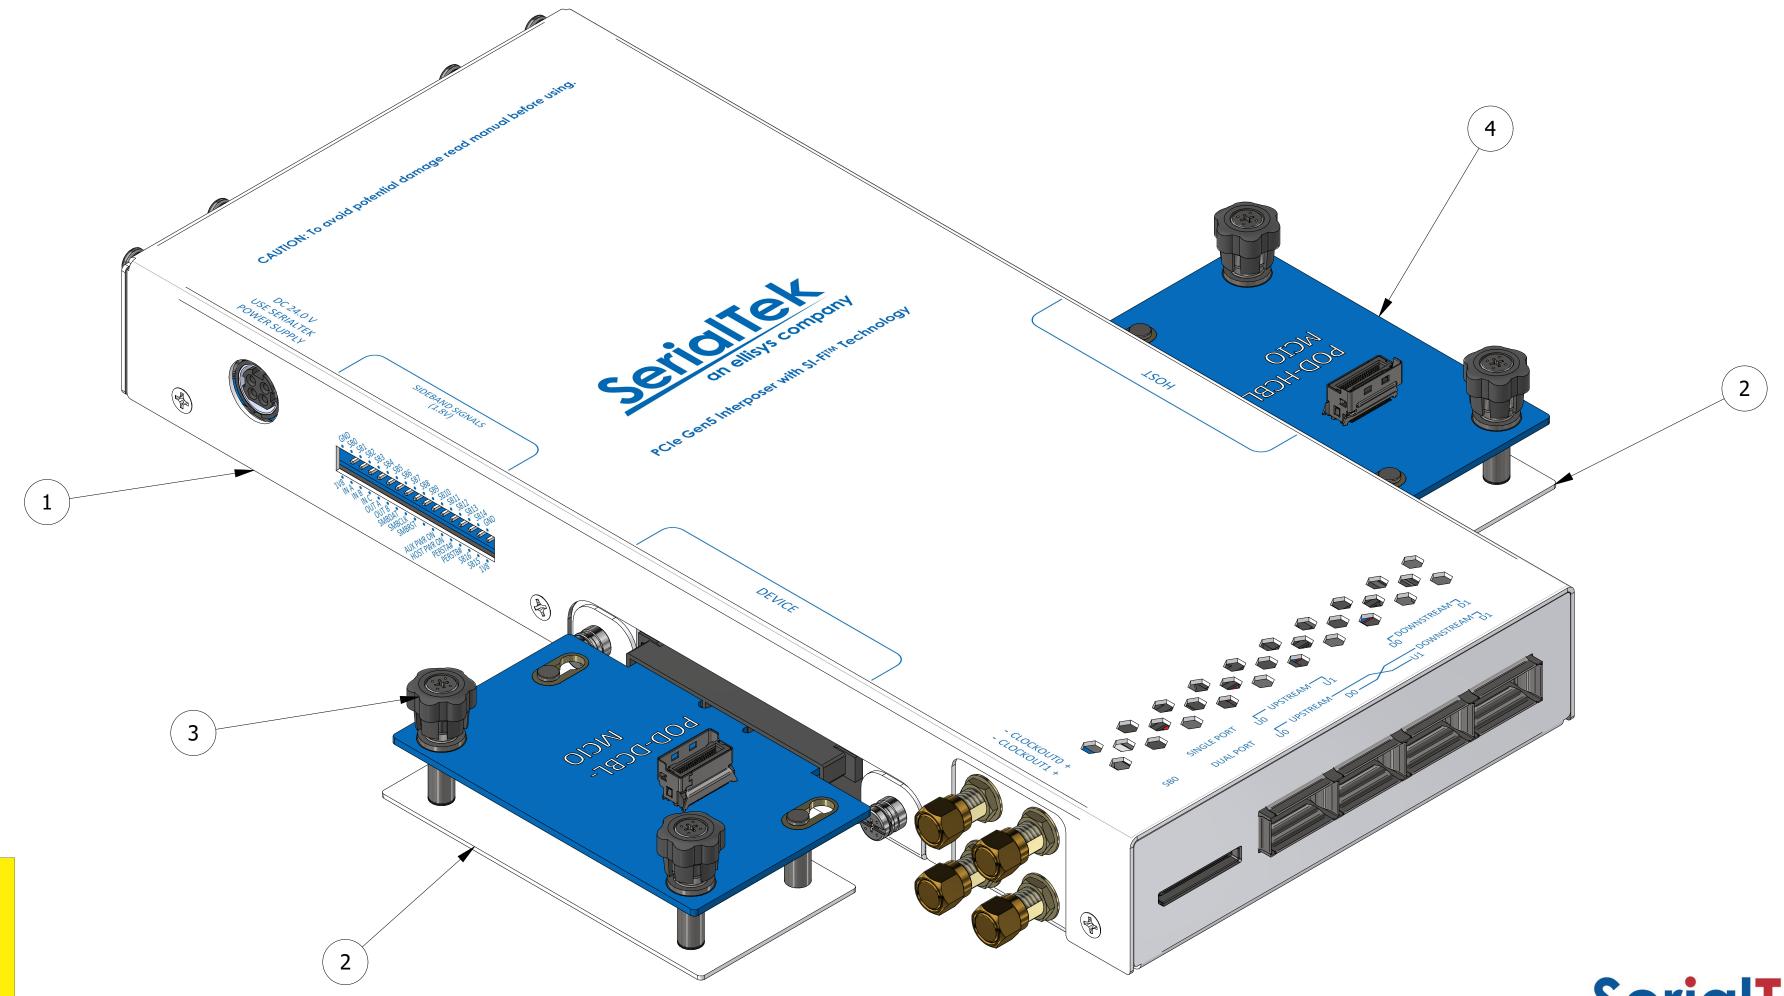


0004674 - R1.3 Page 1 of 5

Item	Part Number	Part Description	Qty
1	4631	POD Main Unit	1
2	4679	Host/Device Cable Adaptor Tray	2
3	4693	MCIO Device PCBA	1
4	4694	MCIO Host PCBA	1



Slide the Host/Device Cable Adaptor Tray into the slot on the HOST side on the underside of the POD Main Unit at an angle of about 60[•].


Rotate the Cable Adaptor Tray so it is horizontal and tighten the M3 Captive Panel Screws to the POD Main Unit, ensuring not to over tighten.

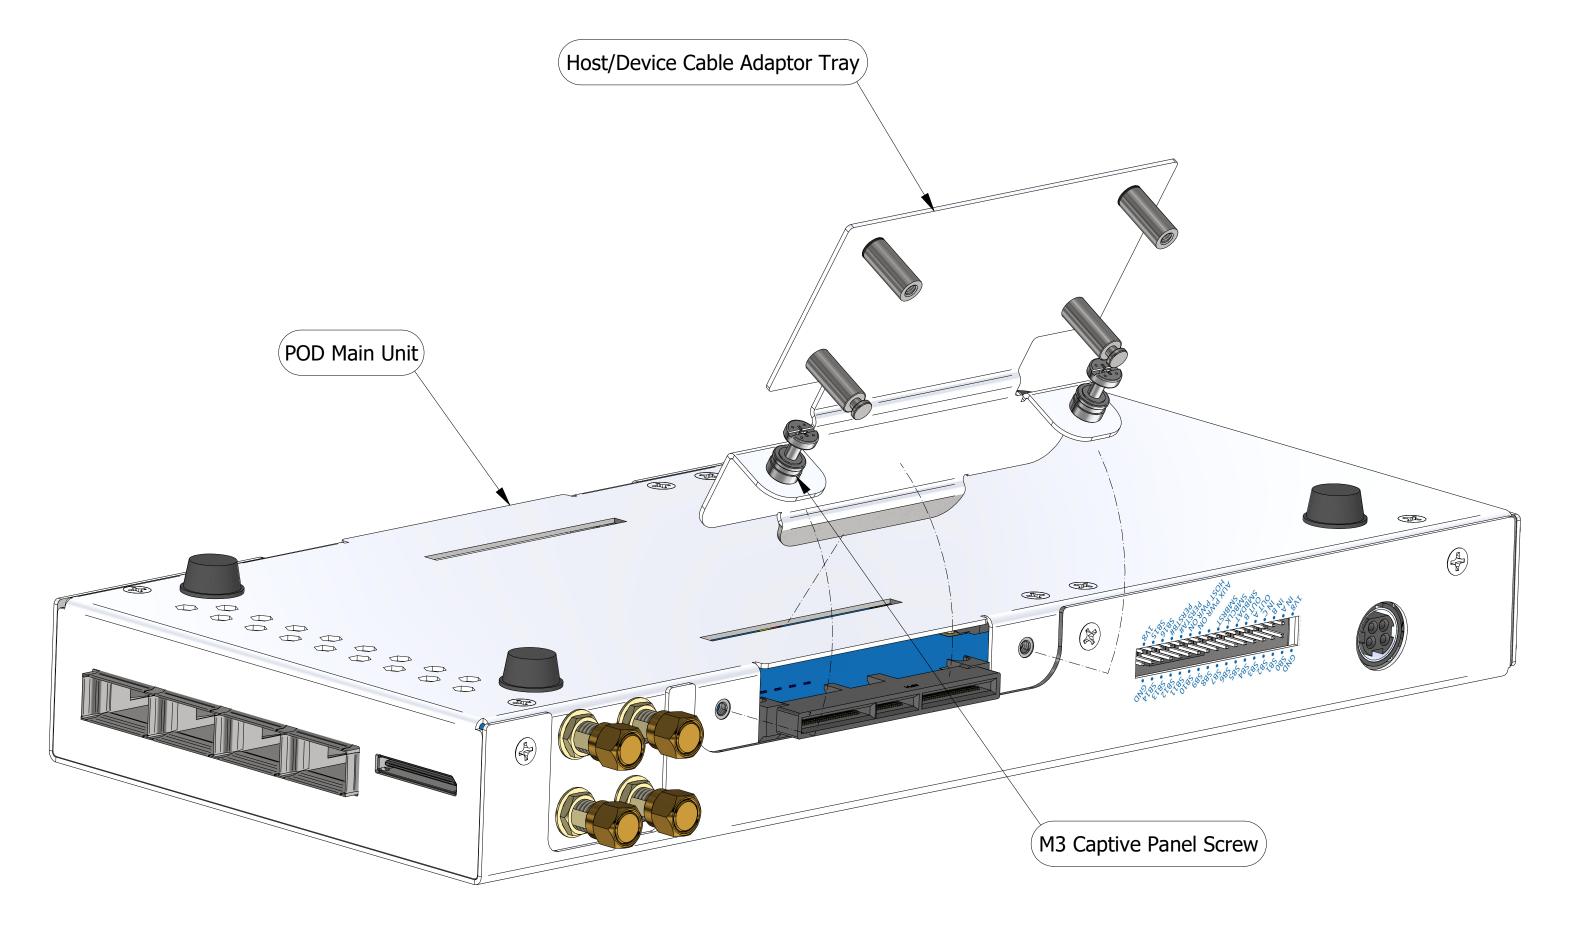

0004674 - R1.3 Page 2 of 5



Raise M3 Captive Screws till it resists and screw thread clears the underside of PCBA, then slide the MCIO Device PCBA into the connector on the DEVICE side of the POD Unit and secure in position on the Host/Device Cable Adaptor Tray with the M3 Captive Screws

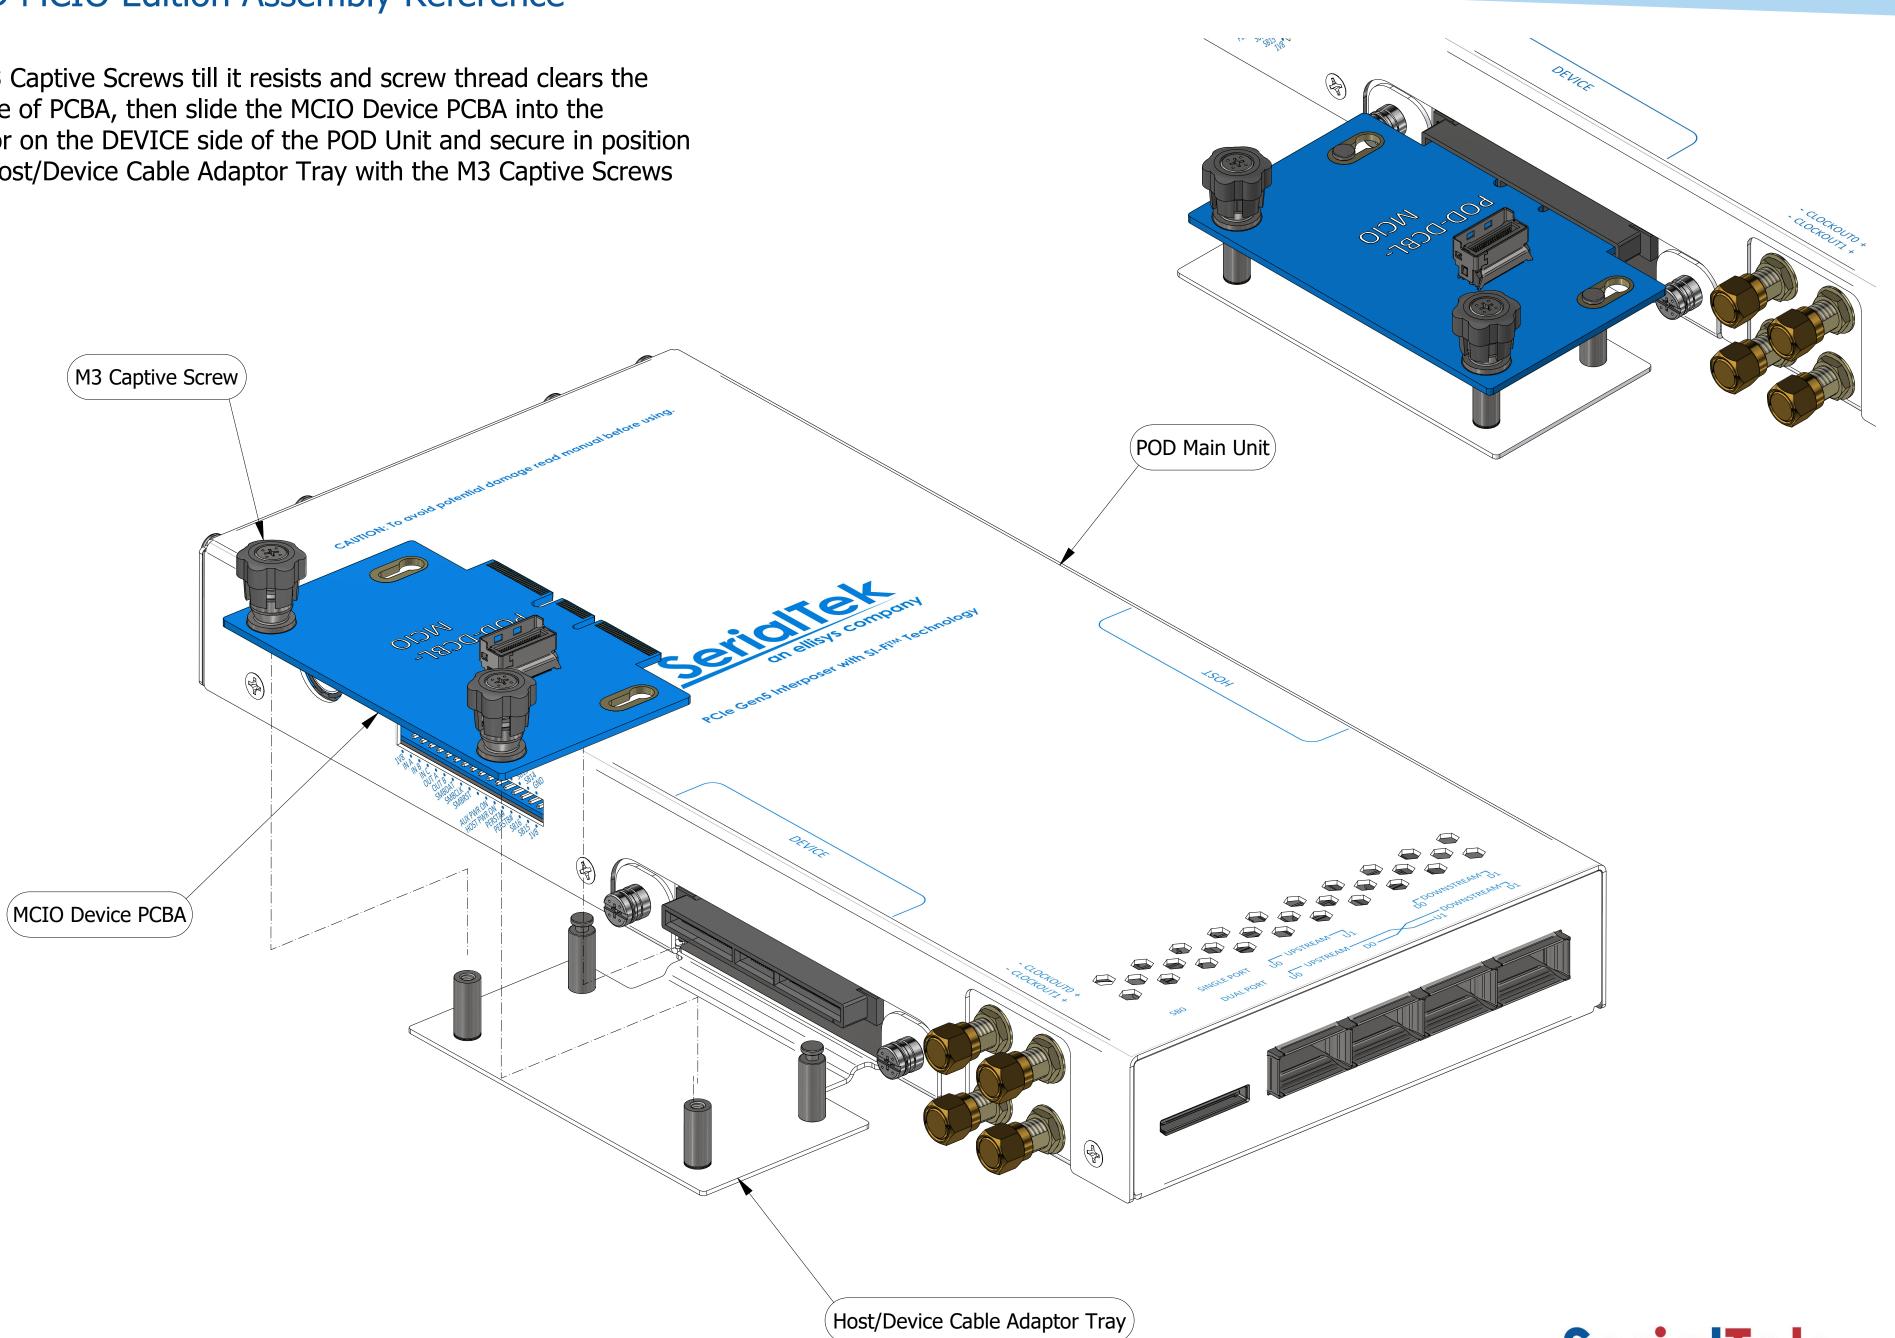


0004674 - R1.3 Page 3 of 5




Slide the Host/Device Cable Adaptor Tray into the slot on the HOST side on the underside of the POD Main Unit at an angle of about 60[•].

Rotate the Cable Adaptor Tray so it is horizontal and tighten the M3 Captive Panel Screws to the POD Main Unit, ensuring not to over tighten.

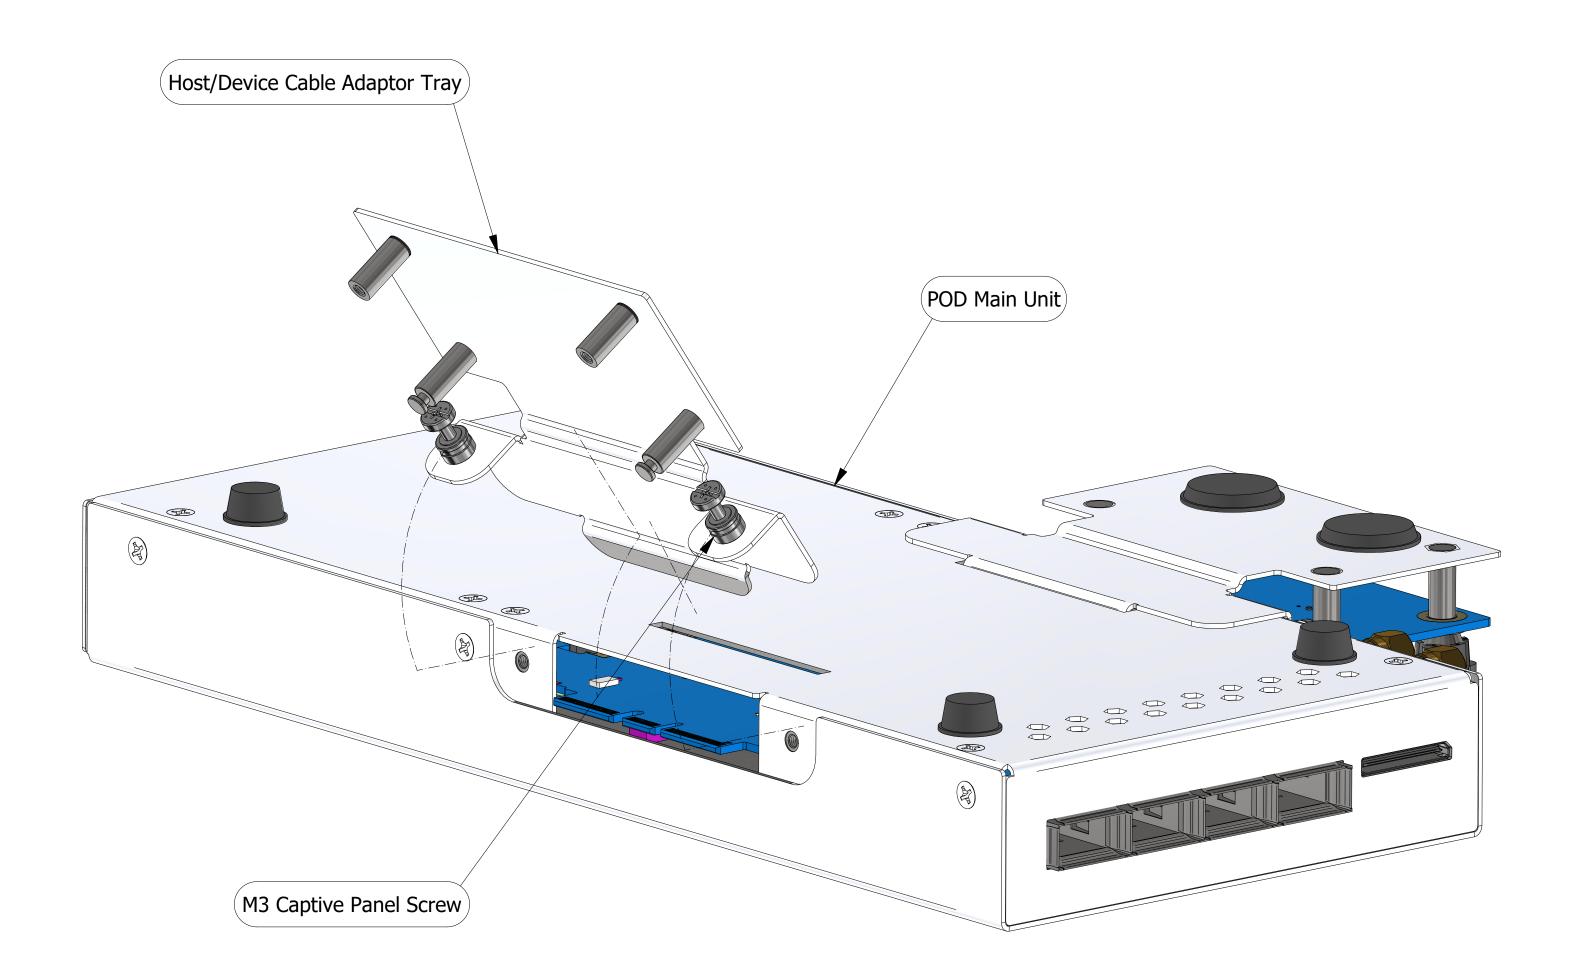

0004674 - R1.3 Page 4 of 5



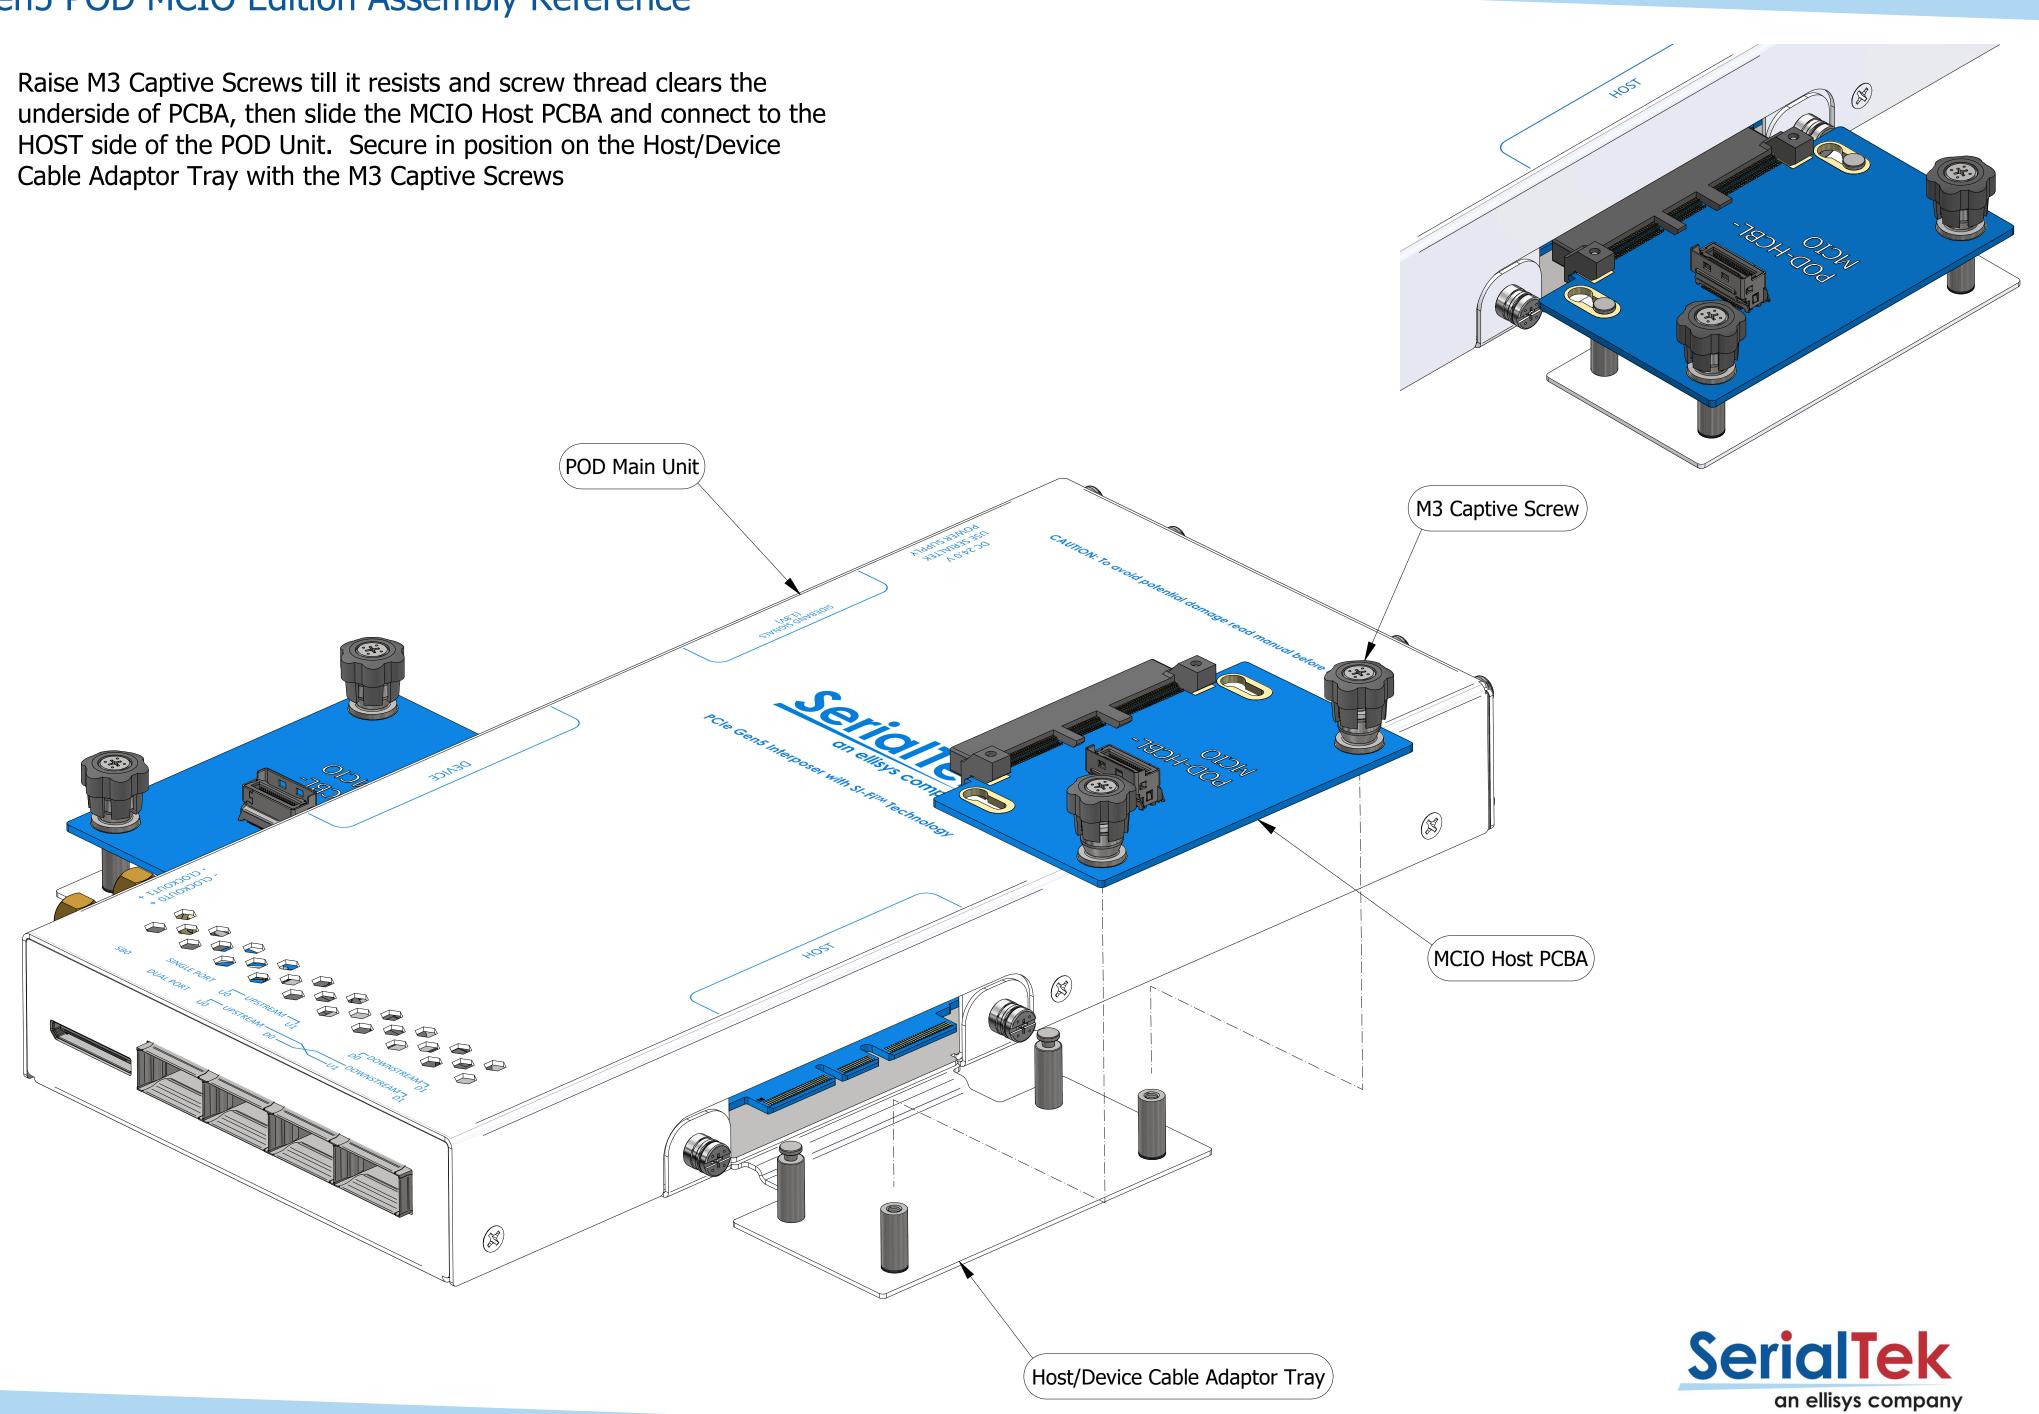

0004674 - R1.3 Page 5 of 5